


Assembly Instruction



ANGGUN

ANGGUN - 1199-SM01-BL418

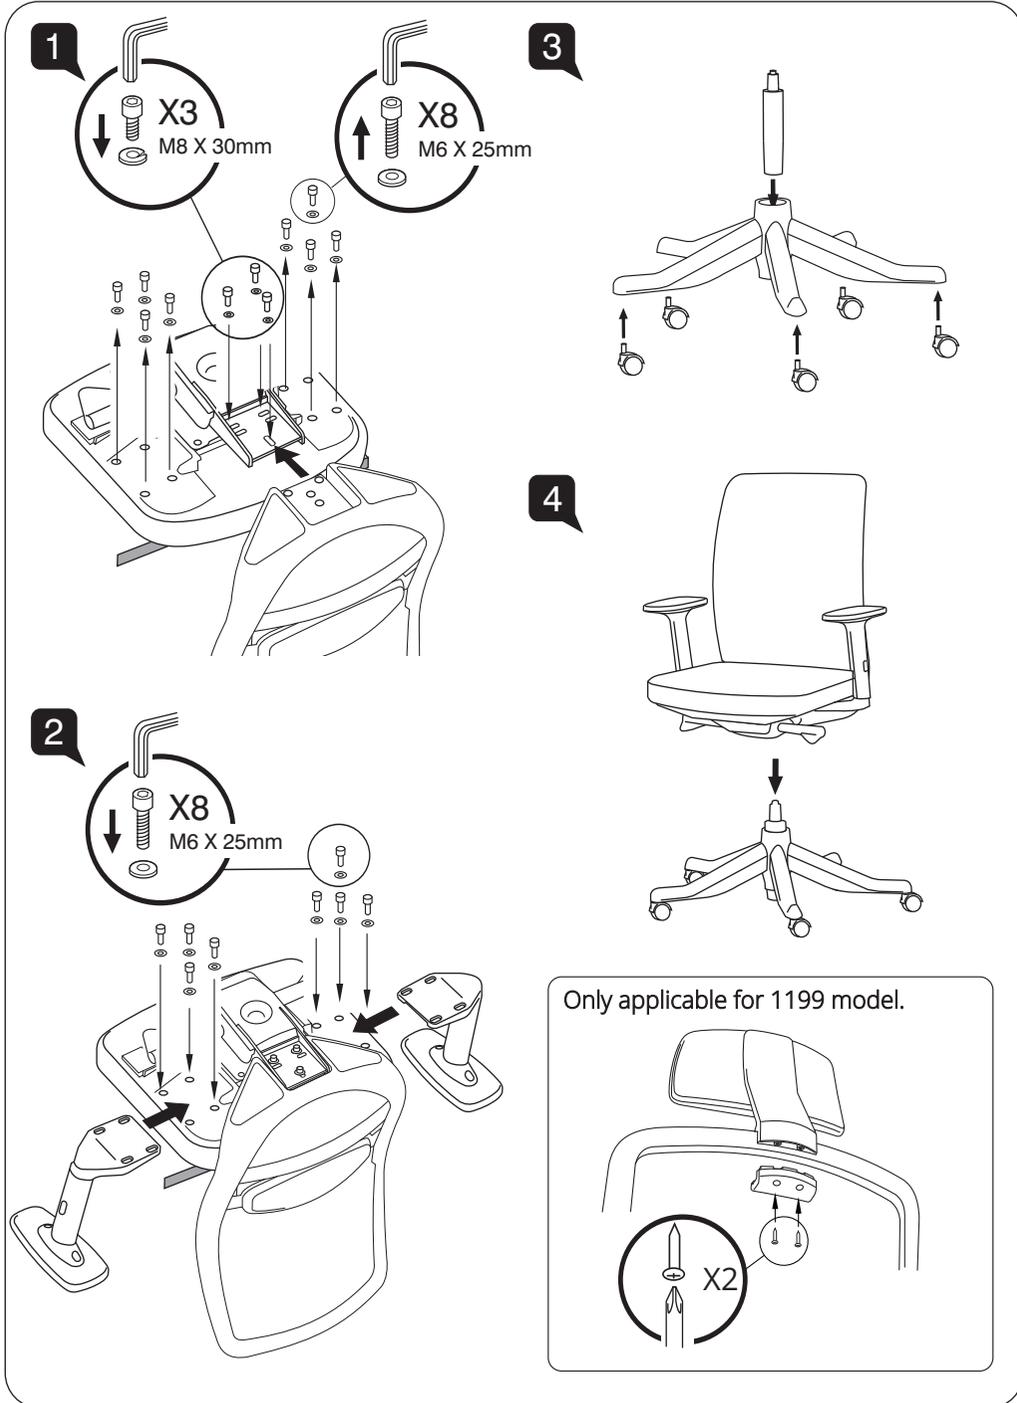

ANGGUN M

ANGGUN M - 1198-SM01-BL418



User Instructions

- A Seat Height Adjustable**
Flip up lever on right-side to raise or lower seat. Adjust such that your feet are adequately supported on floor.
- B Multi-Position Tilt Lock**
Recline to desired position, and flip down lever to lock. Flip up lever to release tilt-lock.
- C Lumbar Height Adjustment**
Slide the lumbar support up or down for desired lumbar position.
- D Armrest Height**
Press the button and raise or lower the armrest. Adjust height to adequately support elbows to take strain off shoulders.
- E Armpad Angle**
Grasp armpads and rotate them inwards or outwards to adjust elbow support to suite specific tasks. An inward position works during keyboard use, while an outward position is recommended during mousing.
- F Armrest Depth**
Grasp armpads and push them forwards and backwards to suite your arm support.
- G Seat Depth Adjustment**
Pull the lever under the right-side of the seat to adjust fore and aft position.
- H Headrest Height** (Only applicable for 1199 model)
Adjust height by holding both sides of headrest and pull up or down to your desired height.

